



www.tehtools.com

Rechargeable Battery

LB2.0Ah LB4.0Ah








To Be Your Exclusive Helper



TEH

BATTERY INDICATOR

Press the check button on the battery cartridge to indicate the remaining battery capacity. The indicator lamps light up for a few seconds.

Indicator lamps		Remaining capacity
Lighted	Off	
		75% to 100%
		50% to 75%
		25% to 50%
		0% to 25%

NOTE

Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

TECHNICAL SPECIFICATION

Model	LB2.0Ah	LB4.0Ah
Voltage	20V	20V
Capacity	2.0Ah	4.0Ah

SAFETY INSTRUCTIONS

WARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. Use TEH power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
3. Only use TEH battery with products from the manufacturer. This is the only way in which you can protect the battery against dangerous overload.
4. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

5. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

6. The battery can be damaged by pointed objects such as nails or screwdrivers or by force applied externally.

An internal short circuit may occur, causing the battery to burn, smoke, explode or overheat.

7. Protect the battery against heat, e.g. against continuous intense sunlight, fire, dirt, water and moisture. There is a risk of explosion and short-circuiting.

8. Ensure that the device is switched off before inserting the battery. Inserting a battery into a power tool that is switched on may result in accidents.

9. Recharge the batteries indoors only because the battery charger is designed for indoor use only.

10. To reduce the electric shock hazard, unplug the battery charger from the mains before cleaning the charger.

11. Allow a hot battery to cool before charging.

12. Do not open up the battery and avoid mechanical damage to the battery. Risk of short circuit and fumes may be emitted that irritate the respiratory tract. Ensure fresh air and seek medical assistance in the event of discomfort.

13. Do not use non-rechargeable batteries!

SAFETY INSTRUCTION OF THE BATTERY CHARGER

a). This device can be used by children aged 8 and over and by people with reduced physical, sensory or mental capacities or with a lack of experience or knowledge, if they are supervised or have been instructed regarding safe use of the device and understand the resulting risks. Children are not permitted to play with the device. Cleaning and user maintenance are not to be undertaken by children without supervision.

b). Children should be supervised to ensure that they do not play with the appliance.

c). **To charge the battery, use only the charger supplied.** Risk of fire and explosion. This ensures that the safety of the device is maintained.

d). **Before each use, check the charger, cable and plug and have them repaired by qualified professionals and only with original parts.** Do not use a defective charger and do not open it up yourself. This ensures that the safety of the device is maintained.

e). **Connect the charger only to a socket with an earth. Ensure that the mains voltage matches the specifications on the charger rating plate.** Risk of electric shock.

f). **Disconnect the charger from the mains before closing or opening connection to the battery / power tool / device.**

g). Keep the charger clean and away from wet and rain. Do not use the charger outdoors. Dirt and the entry of water increase the risk of electric shock.

h). Operate the charger only with the appropriate original batteries. Charging other batteries may result in injuries and risk of fire.

i). Avoid mechanical damage to the charger. This can result in internal short circuits.

j). Do not operate the charger on a combustible surface (e.g. paper, textiles). Risk of fire due to heating during charging.

K). If the power cable for this equipment is damaged, it must be replaced by the manufacturer, a customer service agent of the same or a similarly qualified person in order to prevent hazards.

l). The battery of the appliance is not fully charged at the time of delivery. It therefore needs to be fully recharged before you use it for the first time. For the first recharge cycle we recommend that you charge the battery for about 1 hour. Slot the battery into the base and plug the battery charger into a mains outlet.

m). When the battery is fully charged, unplug the charger from the mains and from the appliance. Charging time is approx. 1 hour.

n). Do not charge the battery continuously since this may damage the battery cells.

o). Do not use the charger to charge non-rechargeable batteries.

NOTE ⚠

Repeatedly charging small capacities may damage the battery cells. Recharge the battery only if the appliance is becoming slow.

SERVICE

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

MAINTENANCE

Occasionally clean the ventilation slots and the terminals on the battery using a soft brush that is clean and dry.

TRANSPORT

The contained lithium-ion batteries are subject to the Dangerous Goods Legislation requirements. The batteries are suitable for road-transport by the user without further restrictions.

When shipping by third parties (e.g.: by air transport or forwarding agency), special requirements on packaging and labeling must be observed. For preparation of the item being shipped, consulting an expert for hazardous material is required.

Dispatch battery packs only when the housing is undamaged. Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging. Please also observe the possibility of more detailed national regulations.

DISPOSAL

Do not dispose of batteries with household waste! Batteries and packaging should be sorted for environmentally friendly recycling.

WARRANTY CARD

Dear customers, the warranty service for purchasing TEH products is as follows:

Under normal use, within one year from the date of purchase. It is guaranteed that the damage is caused by the quality of the tool.

ladies/gentlemen : _____

contact number : _____

employer : _____

fax number : _____

contact address : _____

warranty record : _____

post code : _____

product model : _____

battery serial number : _____

date of purchase : _____

Note: The company reserves the right to amend the above provisions and has the final interpretation right in the case that the warranty service does not violate national laws.

WARRANTY CARD

The following conditions occur during the warranty period, not covered by the warranty:

- a. Any valid legal document (single ticket) certifying the date of purchase
- b. Any damage caused by natural wear and overload
- c. Any damage caused by the use of low-priced inferior accessories
- d. Any damage caused by improper carrying, transportation or storage
- e. Any product that has been opened, repaired, replaced, or modified by itself
- f. Any damage caused by misuse, beyond the scope of use of the tool, and failure to use and maintain in accordance with the instructions

IMPORTANT NOTE

1. The invoice and warranty card must be presented at the time of warranty.
2. The fuselage number on the invoice is the same as the fuselage number on the warranty card.
3. Once this warranty card is issued, if it is lost, it will not be reissued. Please keep it properly.

Note: The company reserves the right to amend the above provisions and has the final interpretation right in the case that the warranty service does not violate national laws.