




www.tehtools.com

Cordless LED Worklight

LL1800

To Be Your Exclusive Helper

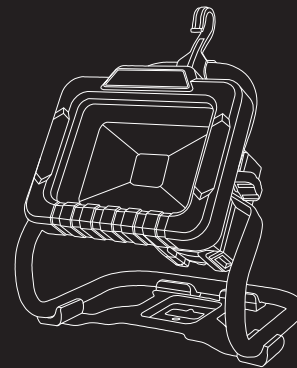


TEH

TECHNICAL SPECIFICATION

Model	LL1800
Voltage	DC 20V
Rated Power	20w
MAX. Brightness	1800 lumens
Brightness Level	3+1
MAX. Working Hours	10 hours
Compatible Battery	LB2.0Ah/LB4.0Ah

COMPONENTS AND ACCESSORIES

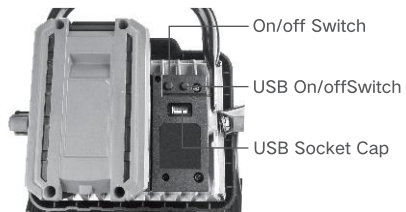

COMPONENTS AND ACCESSORIES



SAFETY INSTRUCTIONS

WARNING

This product may contain lead, phthalate or other chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. Wash your hands after use.

Be sure to read and understand all instructions in this manual before using this portable hand-held light. Failure to follow all instructions may result in electric shock, fire and/or serious personal injury.

SAFETY WARNINGS FOR WORKLIGHT

1. Know your worklight. Read operator's manual carefully. Learn its applications and limitations, as well as the-specific potential hazards related to this light.
2. Use only recommended battery- pack and charging stand | transformer/ DC adaptor. Any attempt to use another battery pack will cause explosion, fire or personal injury.
3. Remove battery pack from Worklight before replacing bulb or performing any routine maintenance or cleaning,
4. Let Worklight cool for several minutes after use before changing the bulb.
5. Do not disassemble the Worklight.
6. Do not place Worklight or battery pack near fire or heat. They may explode. Also, do not dispose of a worn out battery pack by incineration, even if it is severely damaged or completely worn out. The battery may explode in fire.
7. Do not operate Worklight or charging stand/transformer near flammable liquids or in gaseous or explosive atmospheres. Internal sparks may ignite fumes.

8. To reduce the risk of electric shock, do not put Worklight in water or other liquid. Do not place or store portable hand-held light where it can fall or be pulled into a tub or sink.
9. Do not permit children to use Worklight unsupervised. It is not a toy. The temperature of the bulb will become hot after being on only a short period of time. This hot temperature can cause burn injury if touched.
10. Do not use or permit use of Worklight in bed or sleeping bags. This portable hand-held light lens can melt fabric and a burn injury could result.
11. Keep light dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluid, gasoline, petroleum-baseproducts or any strong solvent to clean the portable hand held light.

BATTERY PACK SAFETY WARNINGS

1. Risk of fire and burns. Do not disassemble, heat above 100 ° C(212 ° F), or incinerate. Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
2. Dispose of used battery promptly. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.
3. Keep battery out of reach of children and in original package until ready to use.
4. Never put batteries in mouth. If swallowed, contact your physician or local poison control center.
5. **The battery used in this device may present a risk of fire or chemical burn if mistreated. Replace battery with TEH only. Use of another battery may present a risk of fire or explosion.**
6. Do not use a visibly damaged battery pack or appliance as applicable.
7. Do not modify or attempt to repair the appliance or the battery pack as applicable.
8. Battery must be recycled.
9. Do not short-circuit a cell or battery. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.

10. Do not subject cells or batteries to mechanical shock.
11. Keep cells and batteries clean and dry. Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
12. Do not maintain secondary cells and batteries on charge when not in use.
13. Retain the original cell and battery literature for future reference.
14. Do not use any charger other than that specifically provided for use with the equipment. Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
15. When possible, remove the battery from the equipment when not in use.
16. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
17. Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
18. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
19. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

OPERATING INSTRUCTIONS

NOTE ▲

Before using the tool, read the instruction book carefully.

BEFORE OPERATION


Battery power gauge, press "ON" bottom on the battery.



Installing the battery pack.



Removing the battery pack.

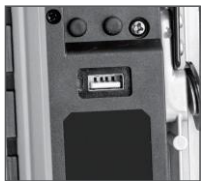

Remove USB socket cap for Joint USB adaptor & charging.

OPERATION



Starting & Stopping.

To start your light just press on/off switch a moment.

To stop your light just press the on/off switch again.

To choose power level, press the switch.

WARNING ⚠ Do not direct the light beam into eyes.

PLACING THE LIGHT

WARNING ⚠


Ensure the Worklight is securely placed to prevent falling object hazard.



Using the bracket to set the light

WARNING ⚠

Do not hang the Worklight on any electrical power cord!

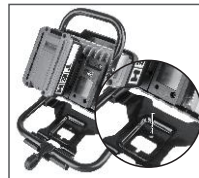


Using the bracket to set the light.

You may use a screw to secure the Worklight in place.



Using the bracket to hang the light.

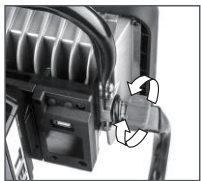

Adjustable head.

The Worklight head can be set in a variety of positions. To switch base positions, rotate the adjusting knob to loosen the light. Adjust head to desired position, tighten the adjusting knob.

CAUTION

Do not place hands or fingers between adjustable head and bracket when positioning Worklight to avoid any hazard!

WARRANTY CARD

Dear customers, the warranty service for purchasing TEH products is as follows:

Under normal use, within one year from the date of purchase. It is guaranteed that the damage is caused by the quality of the tool.

The following conditions occur during the warranty period, not covered by the warranty:

- Any valid legal document (single ticket) certifying the date of purchase
- Any damage caused by natural wear and overload
- Any damage caused by the use of low-priced inferior accessories
- Any damage caused by improper carrying, transportation or storage
- Any product that has been opened, repaired, replaced, or modified by itself
- Any damage caused by misuse, beyond the scope of use of the tool, and failure to use and maintain in accordance with the instructions

ladies/gentlemen: _____ employer: _____

contact number: _____ fax number: _____

contact address: _____

warranty record: _____

post code: _____

IMPORTANT NOTE

- The invoice and warranty card must be presented at the time of warranty.
- The fuselage number on the invoice is the same as the fuselage number on the warranty card.
- Once this warranty card is issued, if it is lost, it will not be reissued. Please keep it properly.

Note: The company reserves the right to amend the above provisions and has the final interpretation right in the case that the warranty service does not violate national laws.